Bennett/HCMI fuse location designation

The labels and numbers on the fuse holders themselves are not the actual fuse numbers.

Look above the fuse holders for the actual “F” numbers of each fuse.

None SE model, 240 VAC line driven machine.

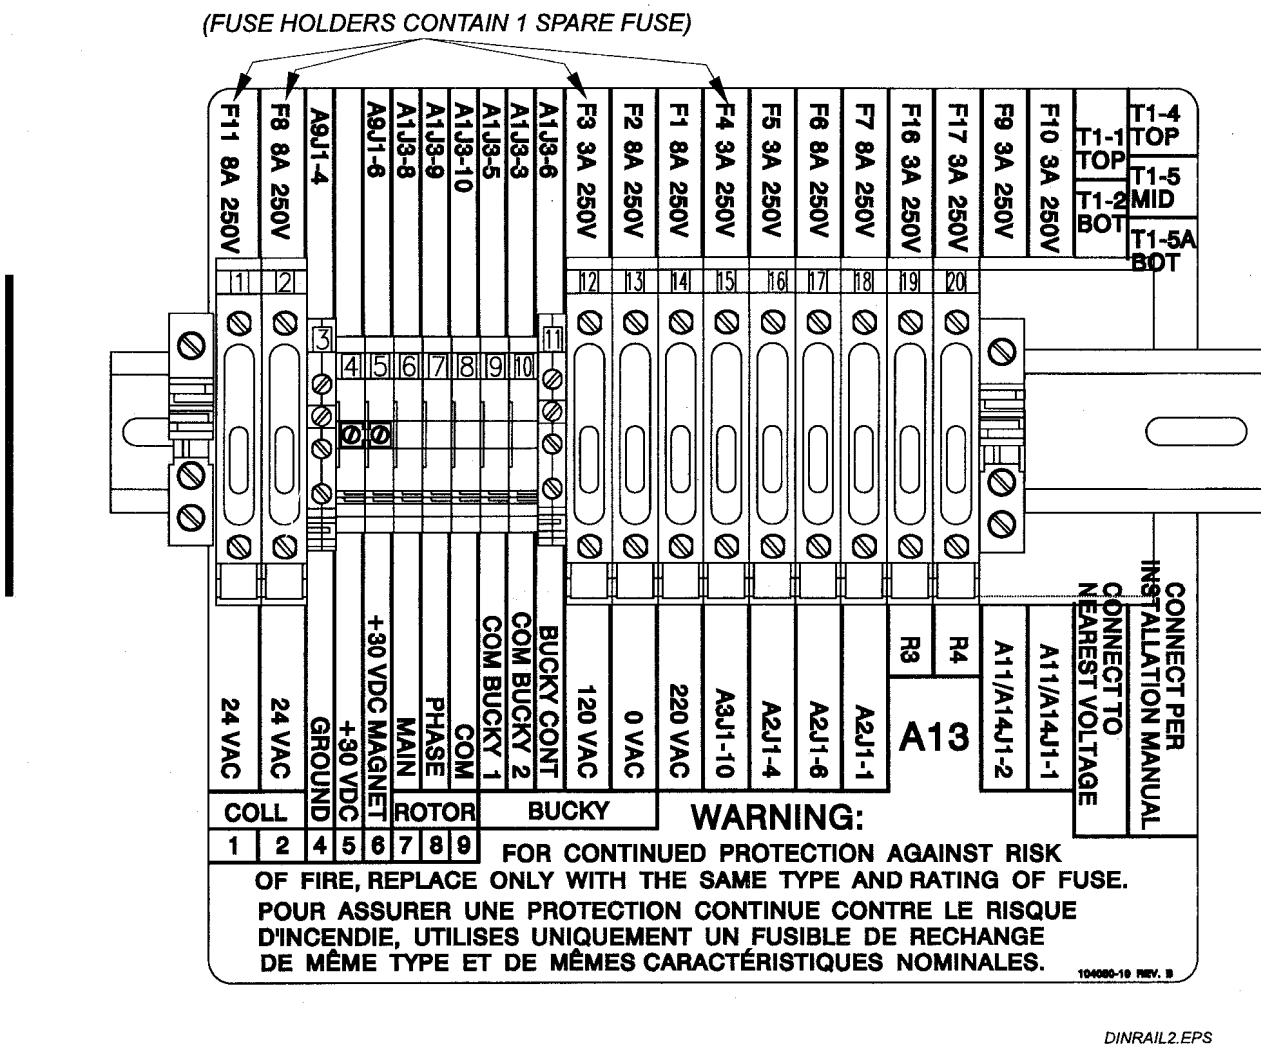

Figure 5-11. DIN Rail (A13) Layout - Non-SE Models

Fuse holders, SE models:

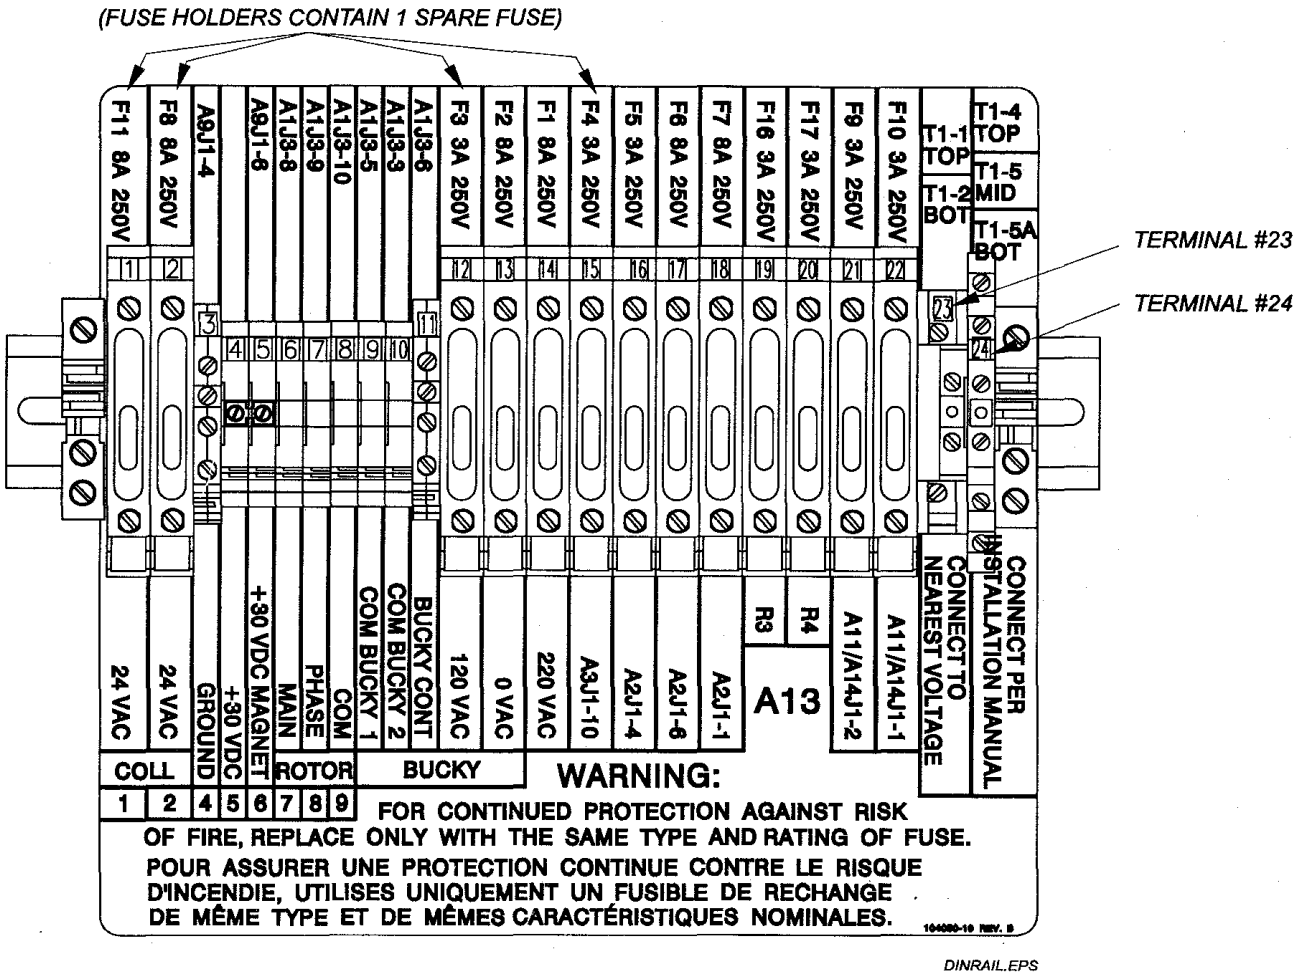

Figure 5-12. DIN Rail (A13) Layout - SE Models

HCMI DIN rail fuses

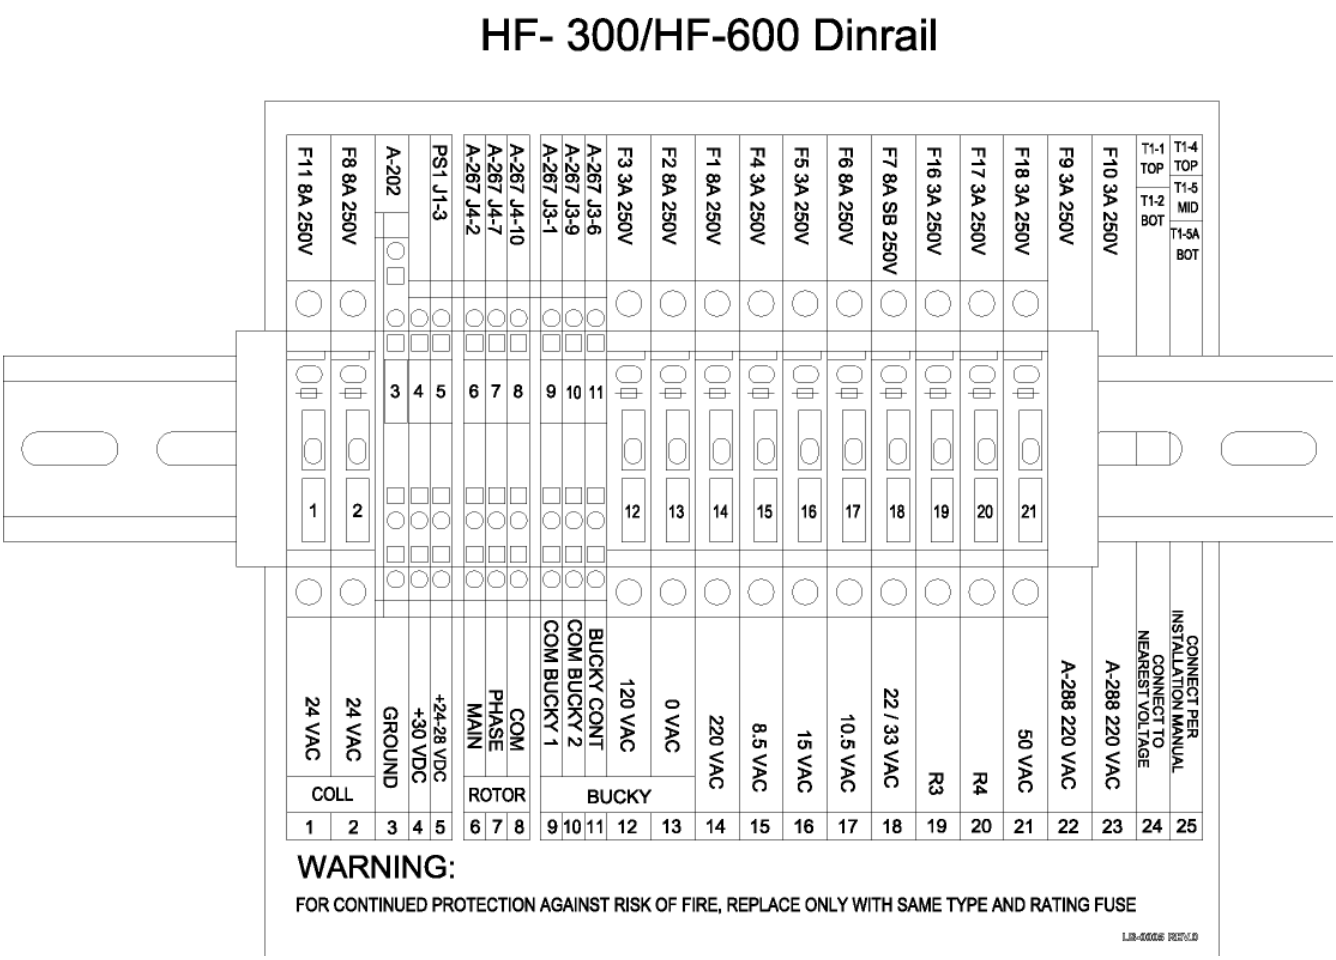

Cabinet photo.

The fuse holders open by pulling up from the bottom, they're hinged and the glass Buss fuse is inside the clip.

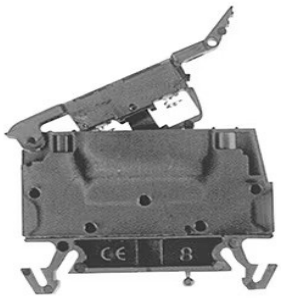

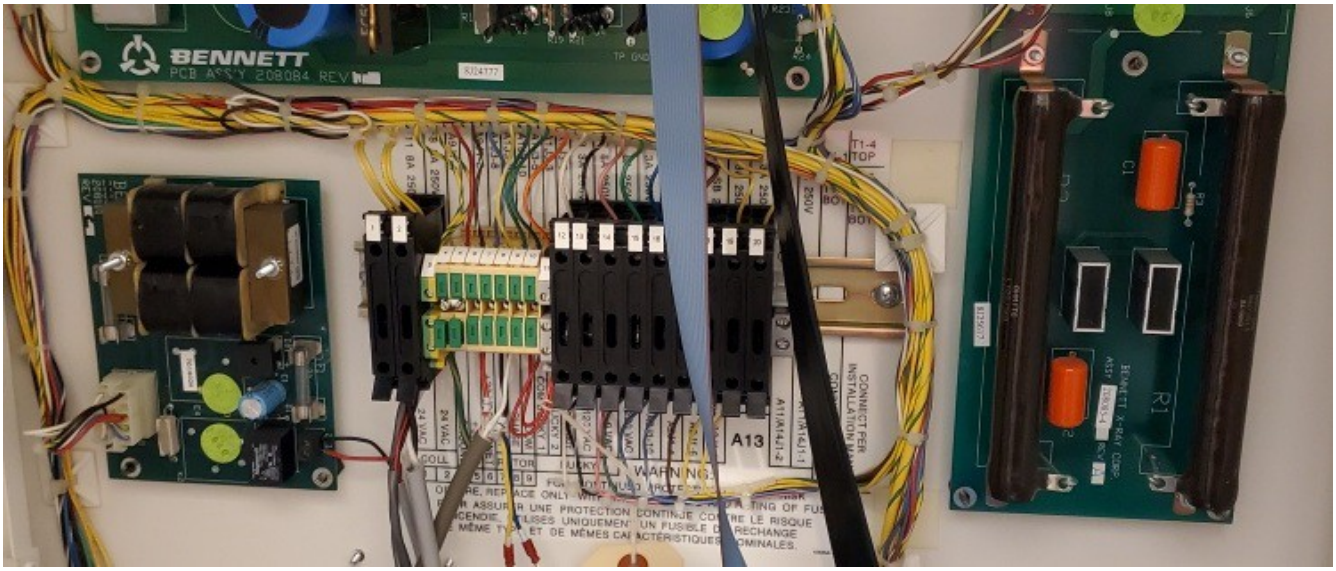
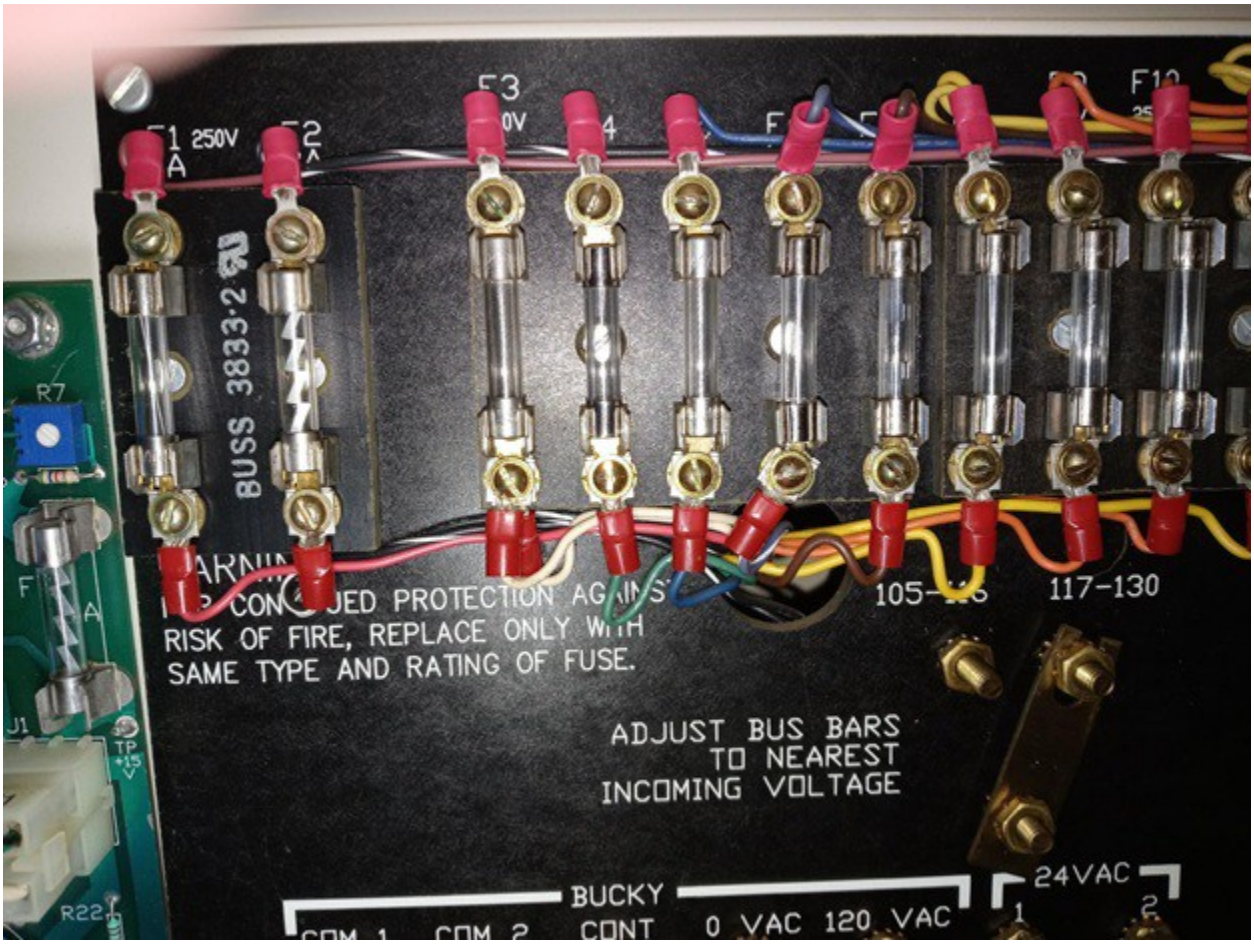
Older Bennett brass fuse holder clips. Fuse number are above the fuse holders.